


PREDRILL INSTRUCTIONS

USE 11/32" DRILL BIT. DRILL ONLY THROUGH 1ST LAYER OF VINYL

PIC / AWNING / FIXED (SINGLE UNITS ONLY)

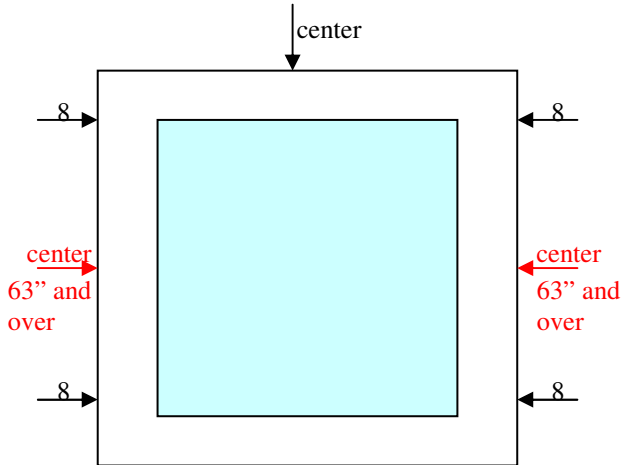


Height (both sides)

- 62 15/16" (1599mm) or less 2 predrill holes, one 8" from the top, second 8" from the bottom
- 63" (1600mm) or over adds one predrill hole in the center

Width (top)

- 1 predrill hole in center of window

CASEMENT (SINGLE UNITS ONLY)

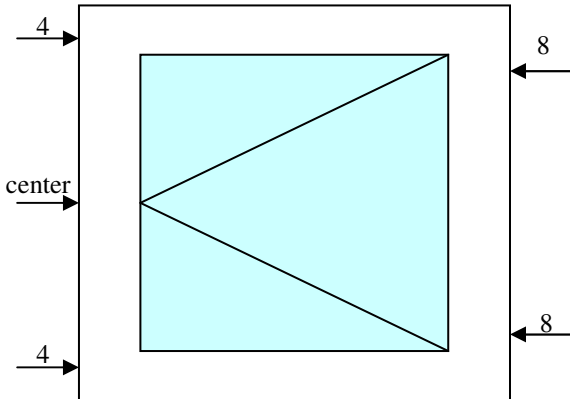


Height (Hinge Side)

- 3 predrill holes, one 4" from top, second centered, third 4" from Bottom

Height (Non-Hinge Side)

- 2 predrill holes, one 8" from the top, second 8" from the bottom

MULTI-UNIT (ALL T-MULLIONS)

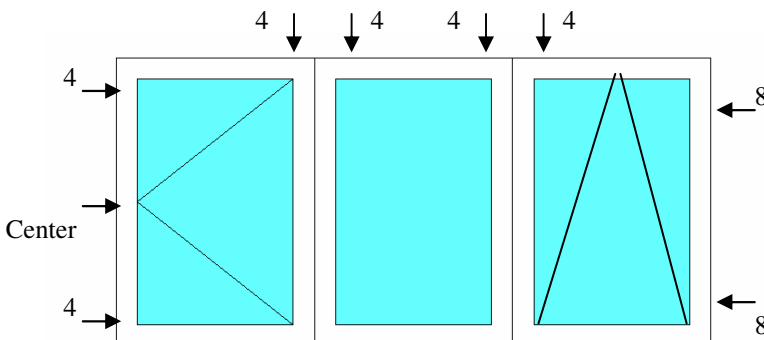

Width (top)

- 4" on each side of T-Mullion