


Pre Drill Guide: For SH & DH

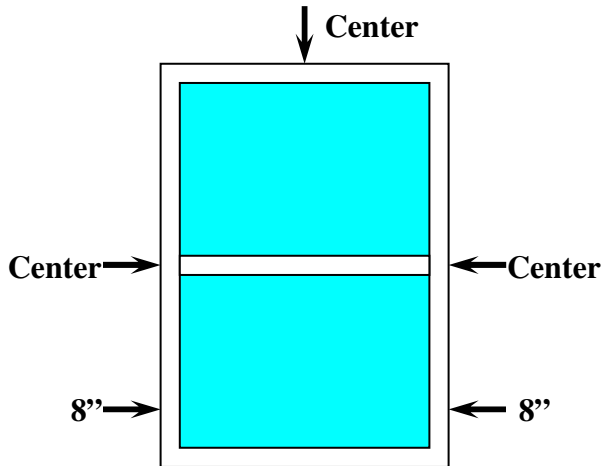


Vertical Single Unit

Height (both sides)

- 8" from the bottom and center just below the balance.

Width (top only)

- 1 Pre-drill in center of frame.

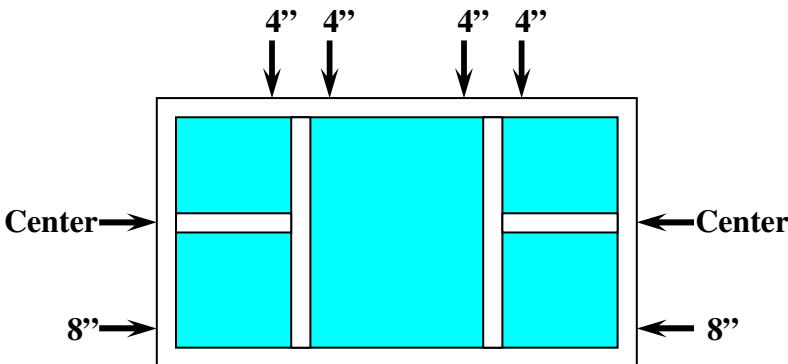


Multiple Units

Height (both sides)

- 8" from the bottom and center just below the balance.

Width (top only)

- Pre-drill 4" on each side of the mullion.

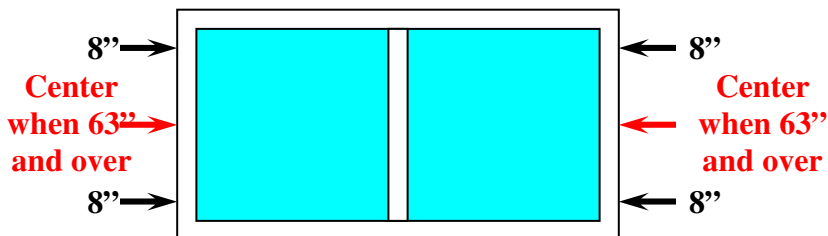

Horizontal Units

Height (both sides)

- 62 15/16" (1599mm) or less 2 anchor brackets, one 8" from the top, second 8" from the bottom
- **63" (1600mm) or over adds one anchor bracket in the center**

Width (bottom)

- 62 15/16" (1599mm) or less, 1 anchor bracket in the center
- **63" (1600mm) or over, add two anchor brackets, each will be at 1/4 the dimension of the overall width**